


DOS & DON'TS | Ringmaster Airtent

...a few tips to make your set up painless!

- Don't cut into the box or packaging.
- Look for sharp objects on the ground before setting up.
- Don't drag the tent.
- Make sure the top is attached to the frame.
- Make sure at least one Velcro strap is undone when attaching the top to the frame during inflation.
- Make sure nothing obstructs the blow off valve.
- Don't leave the tent unattended while inflating (to avoid over inflation).
- Make sure the tents are weighted or staked at all times.
- Don't include sharp objects with the tent when transporting.

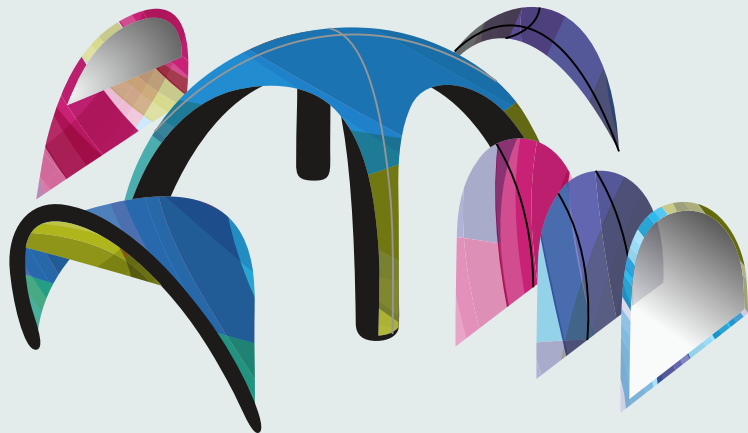

...running into a problem?

If the tent deflates over a long period of time it is most likely due to temperature changes. Quickly pump it back up with manual pump.

If the problem persists or the tent doesn't inflate check all the valves. Check the emergency release valve, if it is leaking give the valve a light tap, as the it may not have completely sealed. Check the frame for scratches or nicks that could result in loss of air.

Please check and tighten the valves periodically to make sure the valves are sealed. You can do this while the airframe is deflated by grabbing on to the back of the valve through the frame material and using the large opening of the plastic wrench supplied to fit into the grooves of the valve and tighten slowly making sure the bladder stays in place, and a tight seal is assured.

